

nickelodeon

TEENAGE MUTANT NINJA TURTLES™

Hand to hand fighting is a skill you must practice before you become a true ninja. Listen to the battle action as you swing the weapons. Land on your mark to hear grunts and groans. The training and battling has just begun!



Avoid getting hit on the Stop Sign on the chest or you will hear Mikey's battle impact sounds.

Hit Michelangelo's nunchuk to activate his battle attack sounds and phrases while taking down his opponent!



Ages 4 and up
Asst. #91620
Item #91644



©2014 Viacom International Inc. All Rights Reserved.
Nickelodeon, TEENAGE MUTANT NINJA TURTLES and all related titles, logos and characters are trademarks of Viacom International Inc.
©2014 Playmates. Playmates International Company Ltd.
23/F, The Toy House, 100 Canton Road, TST, Kowloon, Hong Kong.
PRINTED IN CHINA.

⚠ WARNING:
CHOKING HAZARD- Small parts.
Not for Children under 3 years.

HAND-TO-HAND FIGHTERS MICHELANGELO

Batteries are included for demonstration purposes only and may need to be replaced by the consumer. Adult supervision is required to replace batteries.

To Change Batteries:

- Unscrew battery cover.
- Take out old batteries and replace with 3 new AG13/LR44 batteries.
- Replace battery cover.

Battery Instructions:

- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Batteries are to be removed from the toys when not in use.
- Batteries should only be replaced by an adult.
- Do not dispose of batteries in fire.
- Do not use rechargeable batteries.

Batteries Regulation: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

In an environment with severe electrostatic discharge, the product may malfunction and requires user reset. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

For more detailed instructions visit www.Playmatestoy.com

